

# ACCESSORIES



## EXTENSIONS



810-5701 Shown



811-0414 Shown

### Ordering Information

Part Number	For Tip Style	For Tip Sizes	For Torch	Description
811 0414	9	00-10	750/800	10" (25.4cm) Flexible
810 5701	9	00-10	750/800	8" (20.3cm) Dual Flexible



811-0992 Shown



811-0991 Shown



811-0853 Shown

### Ordering Information


Part Number	For Tip Style	For Tip Sizes	For Torch	Description
811 0992	HD (requires 817 0327)	1-5	800	42" (106.7cm) Rigid
811 0991	757 (requires 811 1410)	12-18	800	24" (61.0cm) Rigid
811 0853	757 (requires 811 1410)	12-18	800	18" (45.7cm) Rigid



811-1412 Shown



811-1411 Shown

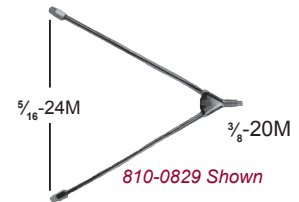

810-0829 Shown

### Ordering Information

Part Number	For Tip Style	For Tip Sizes	For Torch	Description
810 0829	759	5-10	750/800	8" (20.3cm) Dual Flexible
811 1411	759	5-10	750/800	9" (22.9cm) Flexible
811 1412	759	5-10	750/800	4" (10.2cm) Rigid



811-0434 Shown

### Ordering Information

Part Number	For Tip Style	For Tip Sizes	For Torch	Mixer	Description
811 0434	9	00-10	750/800	810 1700	10" (25.4cm) Flexible